



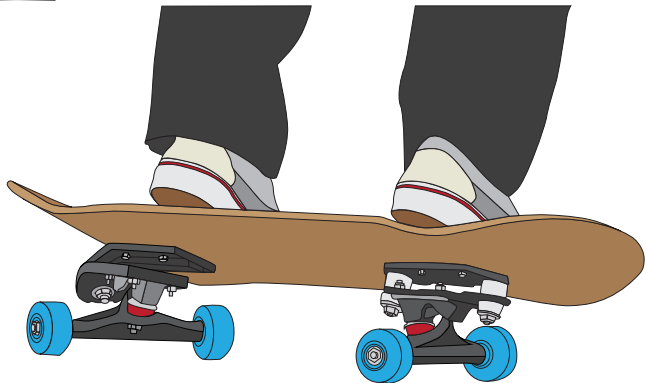

# **WATERBORNE SKATEBOARDS**

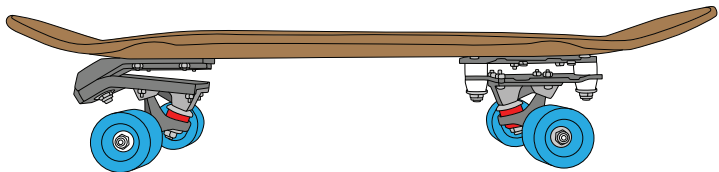


## **Waterborne Surf Adapter Assembly Instructions**




① Surf Adapter

② Rail Adapter

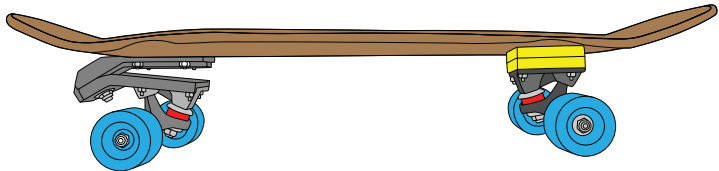





① Surf Adapter

③ Risers


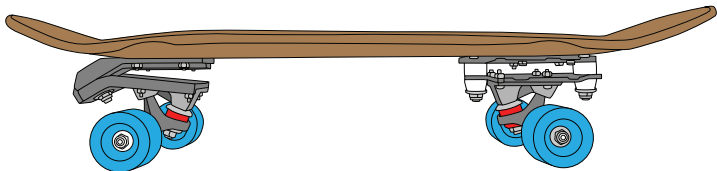


① Surf Adapter

② Rail Adapter

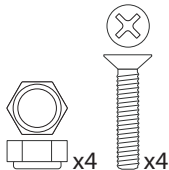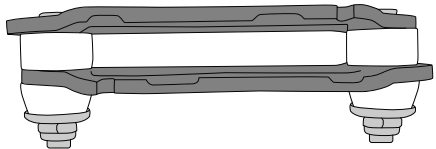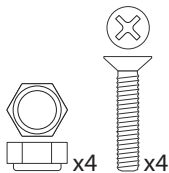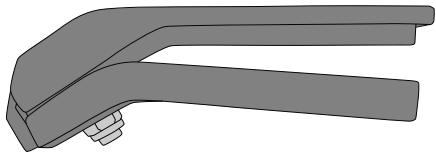






# Tools

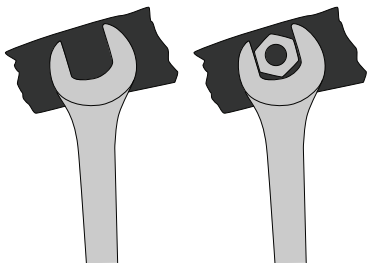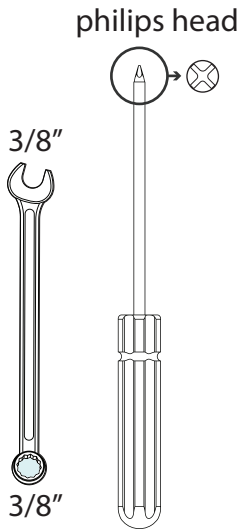

Tip: to help hold the nut in place while using the screwdriver to tighten, try putting a piece of tape on the open end of the wrench and sticking the nut in place. (tape not included). Fingers also work well too!


# TIPS

Note that the hardware in each bag is different. You can also use the hardware that was on your skateboard for attaching the deck to the adapters.

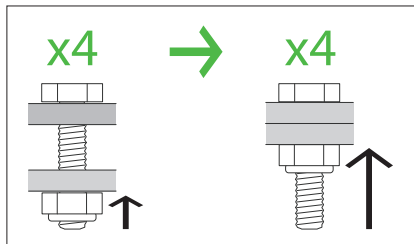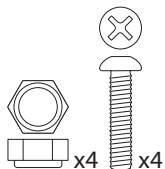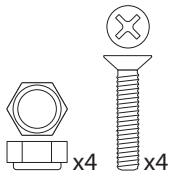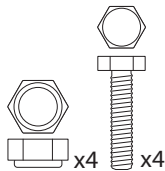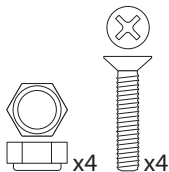


## Tip: Traditional kingpin

Note your truck alignment  
(take a photo of your skateboard before  
removing trucks)

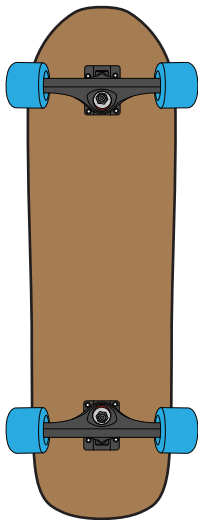


before

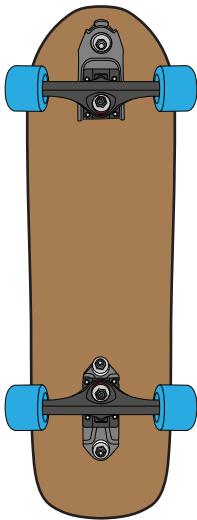


after

Tip: Reverse kingpin


Note your truck alignment  
(take a photo of your skateboard before  
removing trucks)

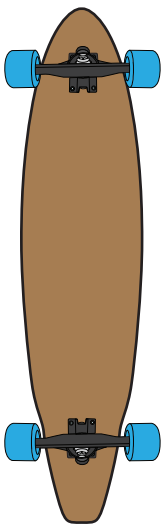





before

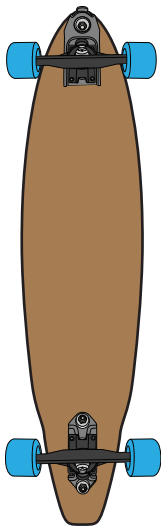


after

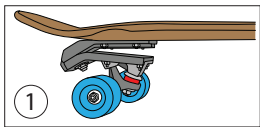






## 1.1 Prepare parts

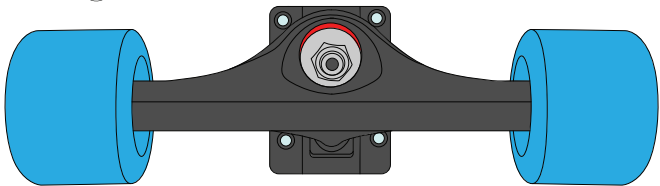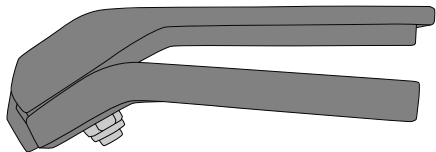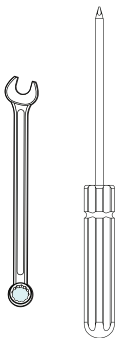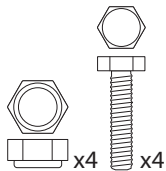






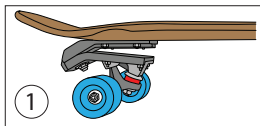



## 1.2 Insert Bolts

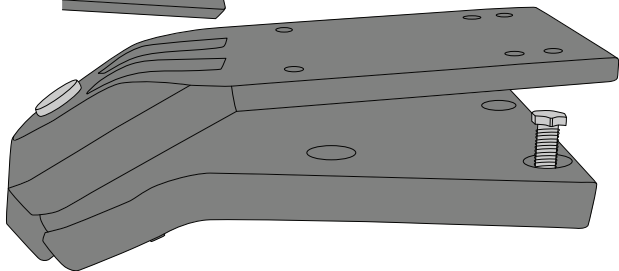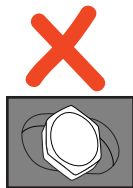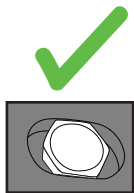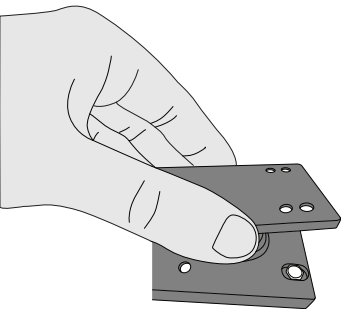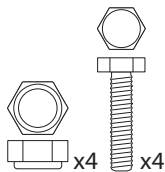


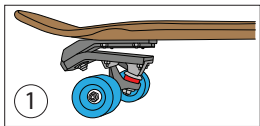



### 1.3 Attach Truck

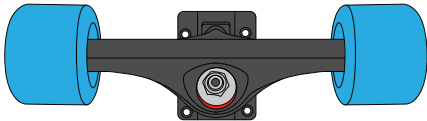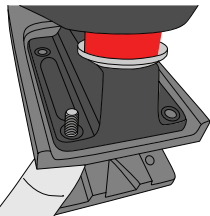

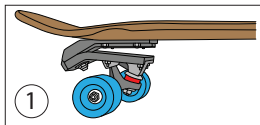




## 1.4 Tighten Bolts

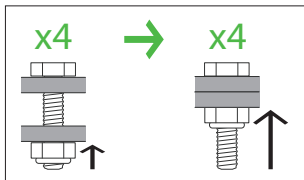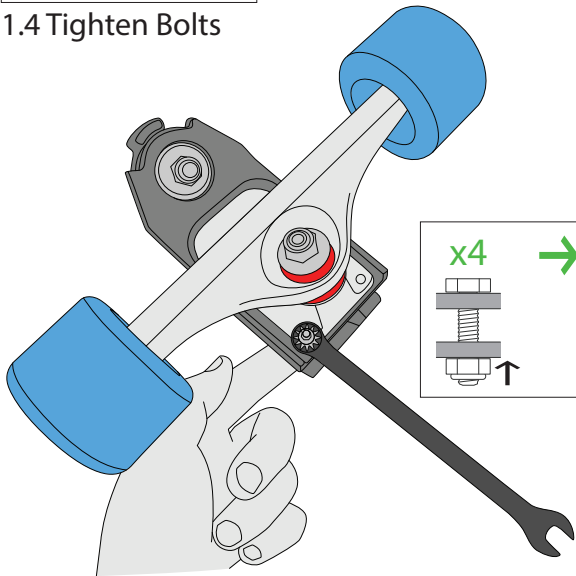


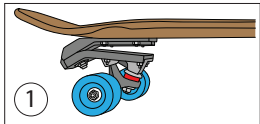

1.5 Align parts and prepare bolts





original hardware  
is also OK to use

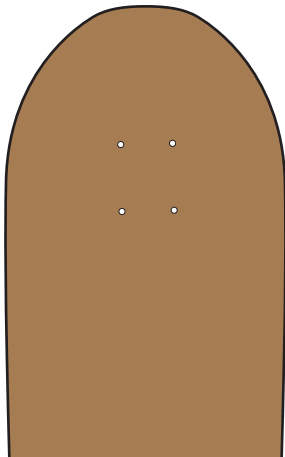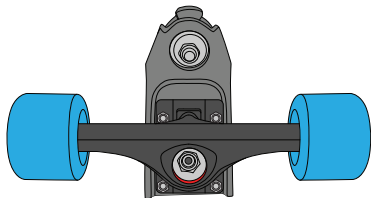


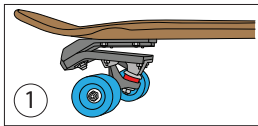




## 1.6 Choose correct bolt


original hardware  
is also OK to use

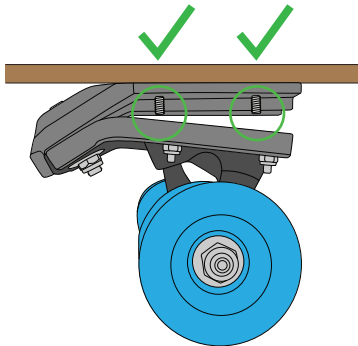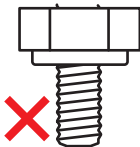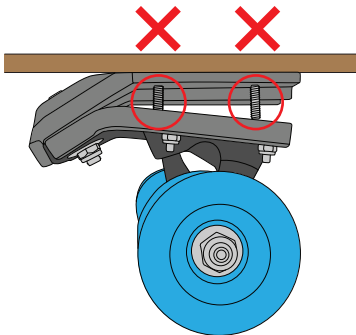

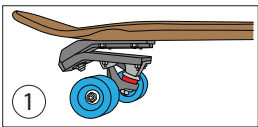



## 1.7 Tighten Bolts

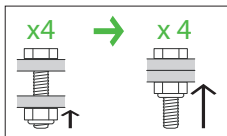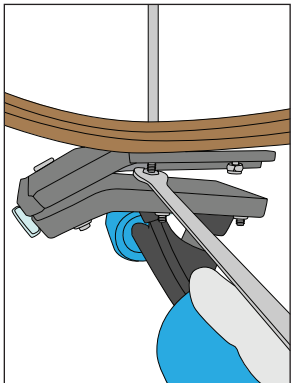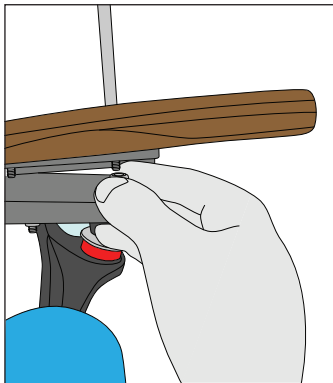

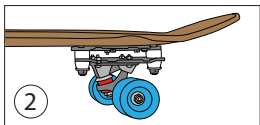


## 2.1 Prepare parts

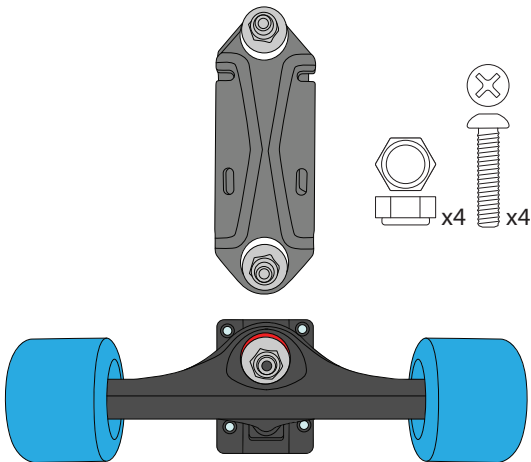


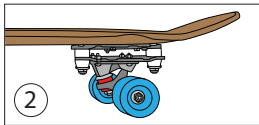




## 2.2 Align truck to Rail Adapter

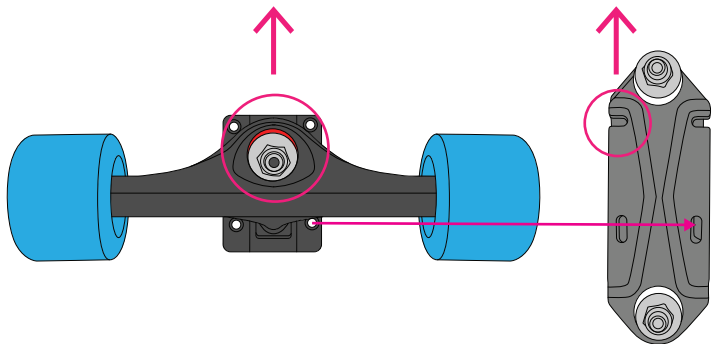





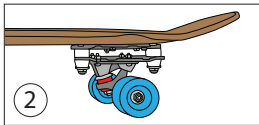



## 2.3 Tighten bolts

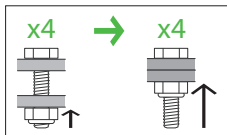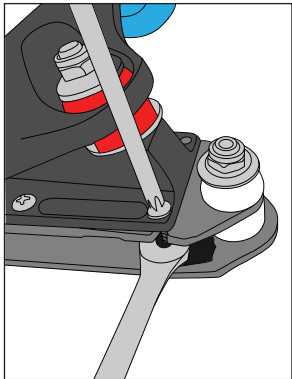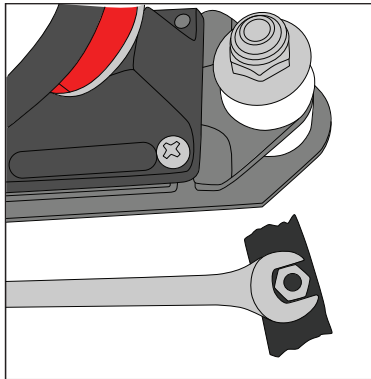


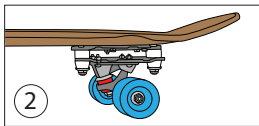



## 2.4 Align Rail Adapter+truck to Deck

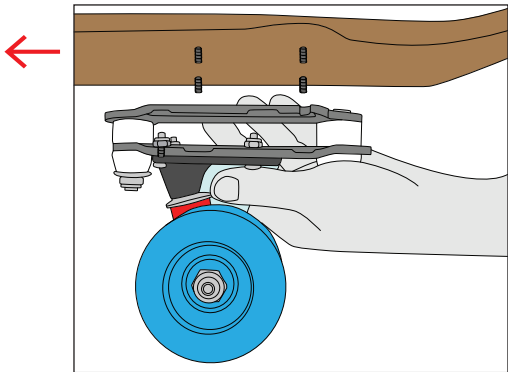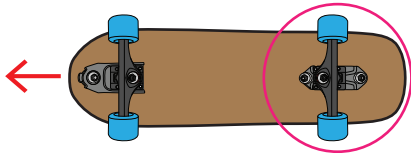



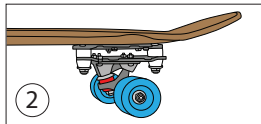


2.5 Tighten bolts

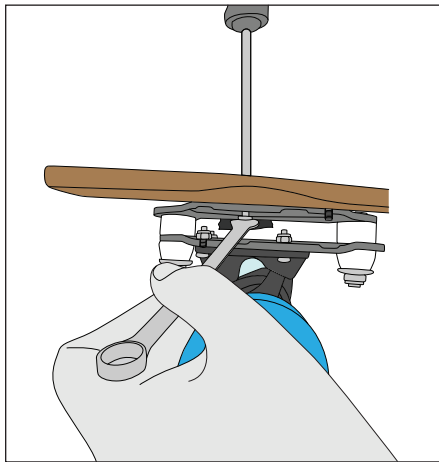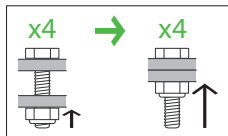


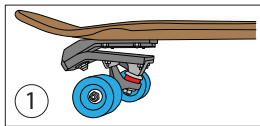


+

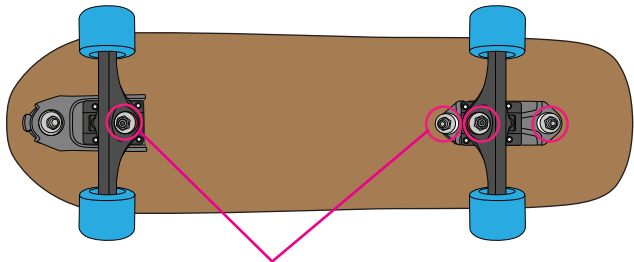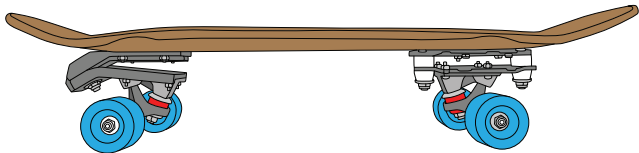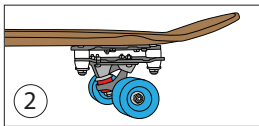


adjust as needed

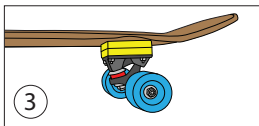


### 3.1 Prepare parts

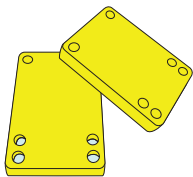


x4





x4

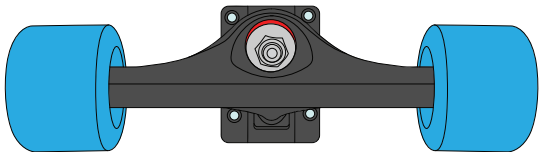


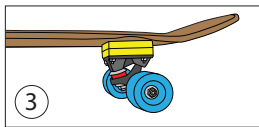



### 3.2 Insert bolts, align truck to deck

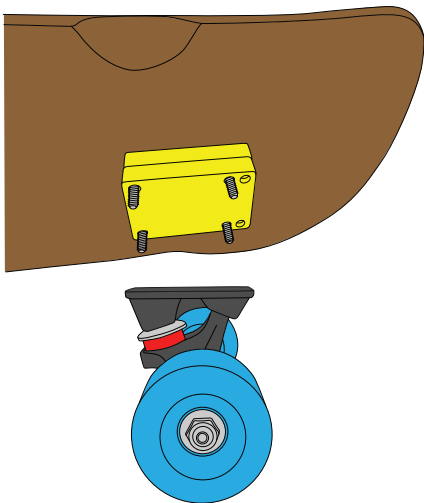



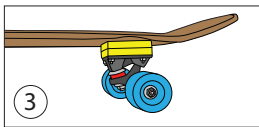


### 3.3 Tighten bolts

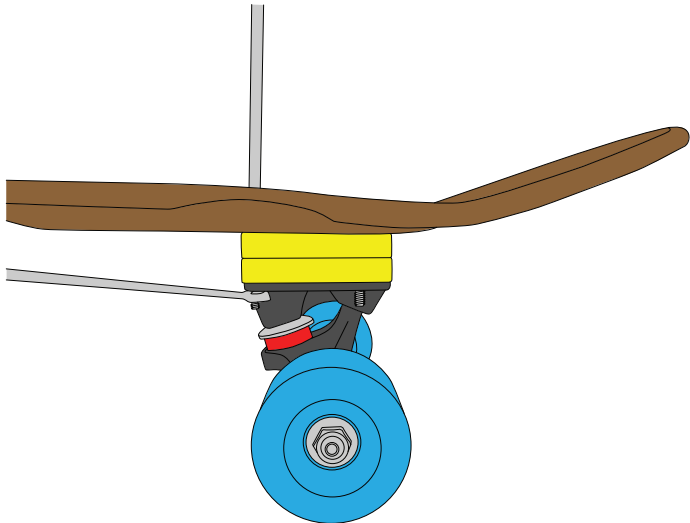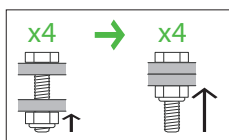

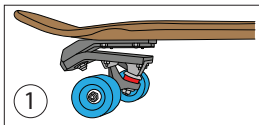

+

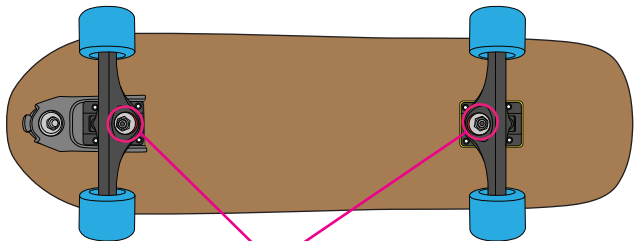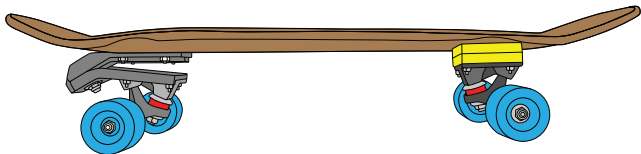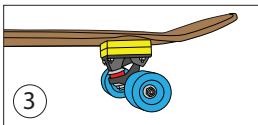

adjust as needed



extra page - use for.....

extra page - use for.....